


heater array control and measurement (HACAM)

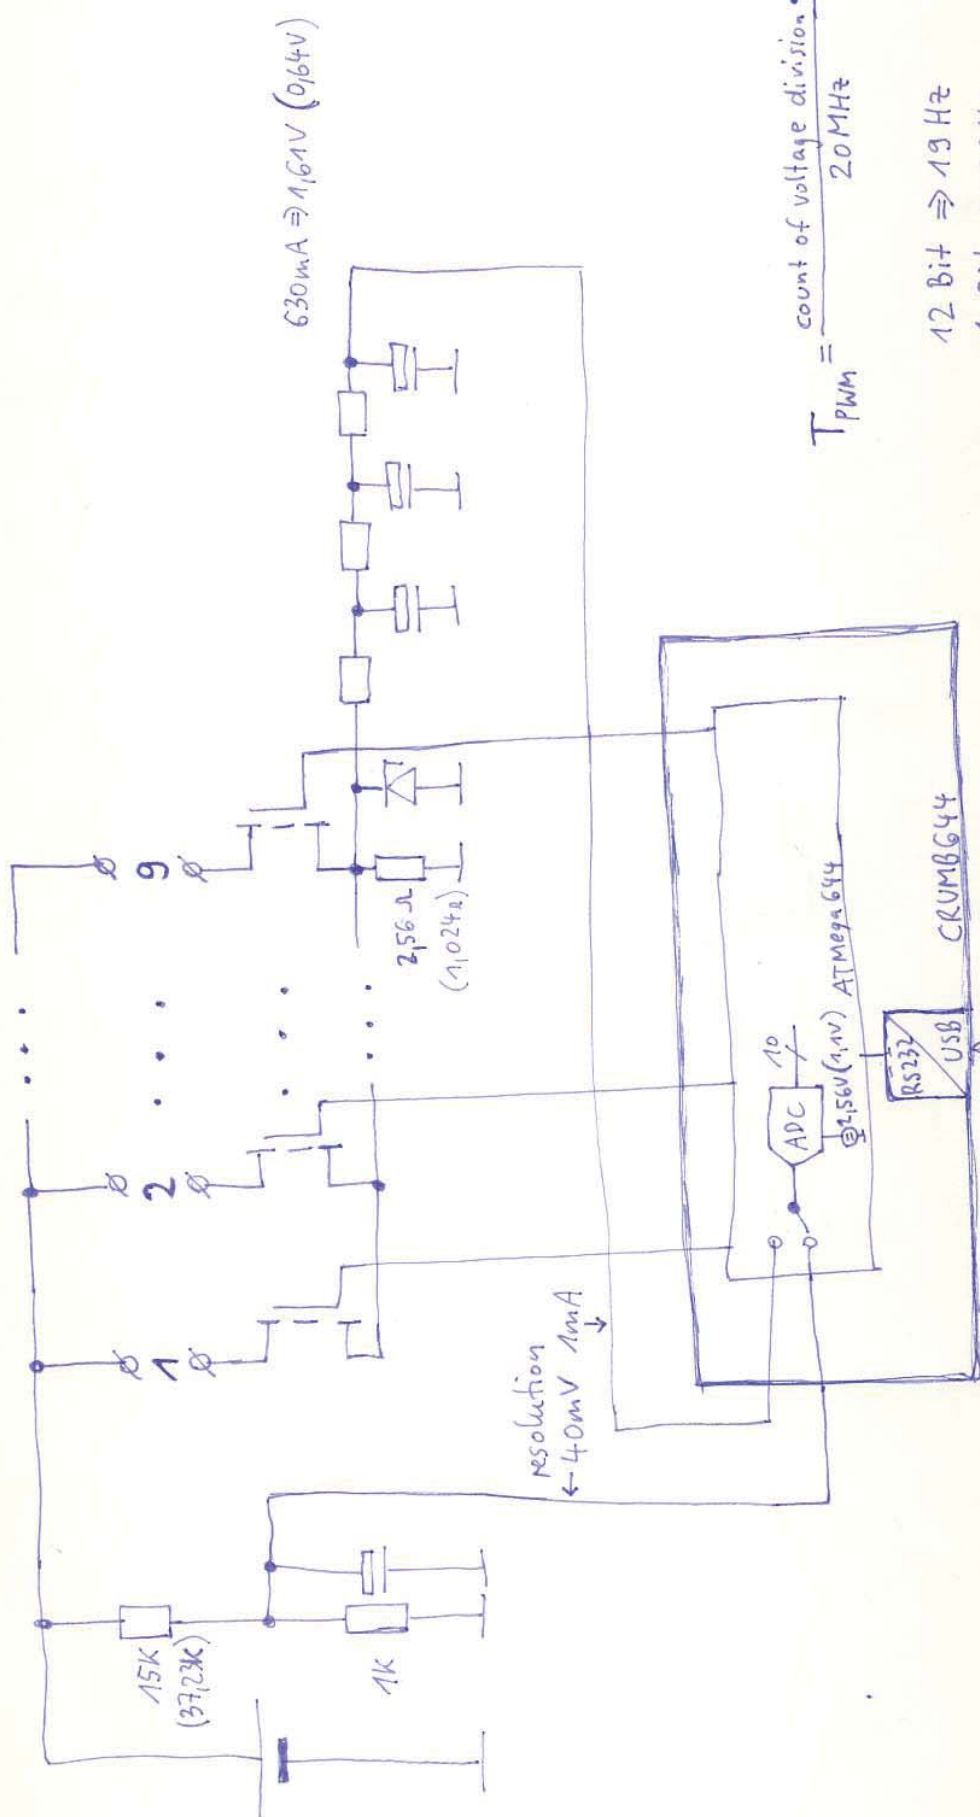

$$T_{\text{PWM}} = \frac{\text{count of voltage division} \cdot 256}{20\text{MHz}}$$

12 Bit \Rightarrow 19 Hz

10 Bit \Rightarrow 76 Hz

Labview slow control
(max. 1000 values/s)